


- Avoid Forklift Accidents
- Alert Workers & Pedestrians
- Warehouse, Yard and Office Applications
- Reduce Liabilities
- Increase Up Time



Let pedestrians and operators know if someone is just around the corner with our New LOOK-OUT™

Installations Instructions

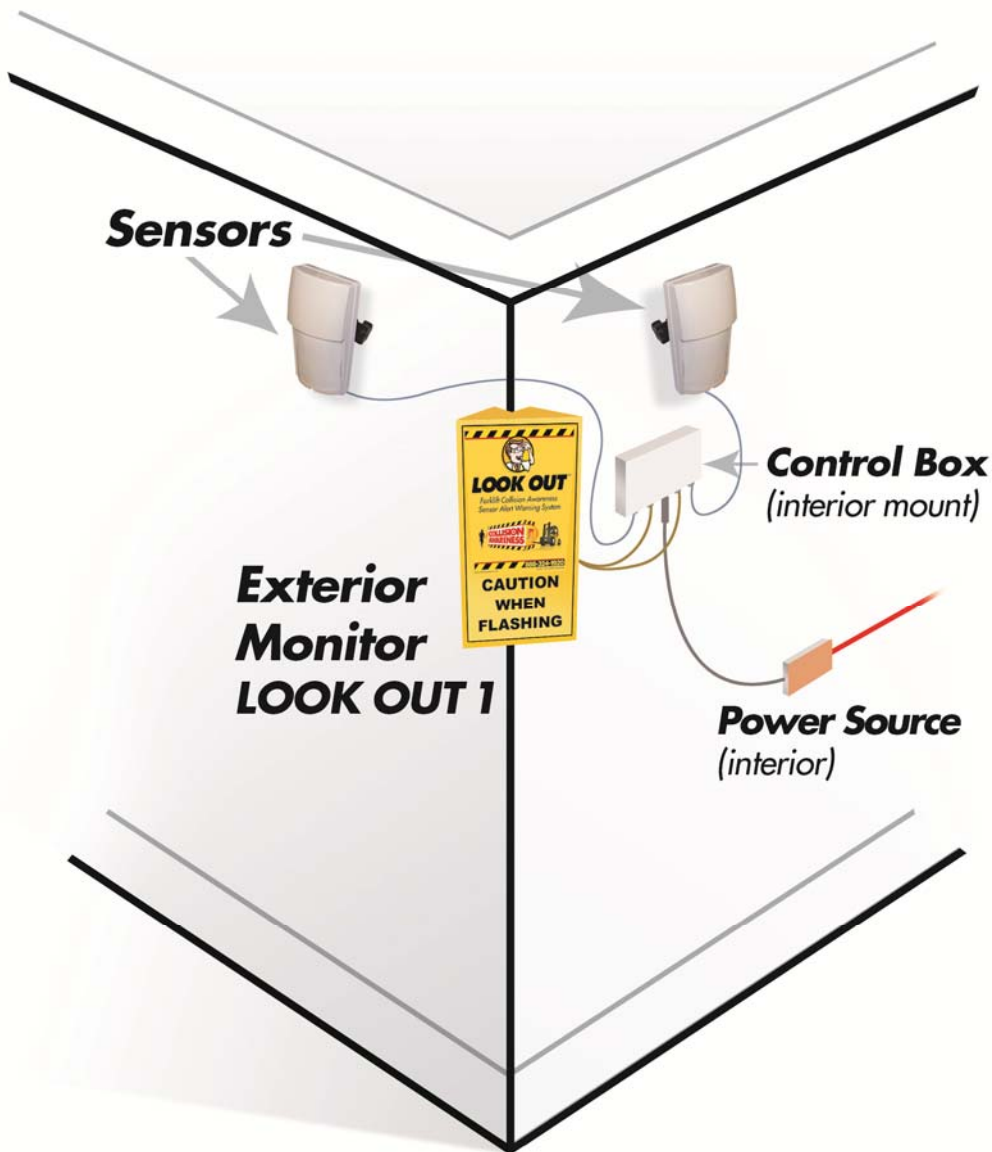

Forklift Collision Awareness Sensor Alert Warning Products

www.collisionawareness.com



Included with your order:

- 1) Two outdoor sensors
 - 2) One powder coated stainless steel Look Out 1 exterior unit
 - 3) One control box
 - 4) One power cord
-
- 1) Mount each exterior sensor. NOTE: the exterior sensor bracket may be taken apart by loosening up the plastic wing nut and then re-attaching after mounting to the wall.
 - 2) Mount the Look Out exterior at the corner of the building.
 - 3) Drill holes in the wall and push through the wires which will connect to the control box.
 - 4) Open the control box and mount the rear portion.
 - 5) Feed sensor wires into the top of the unit as indicated on the front page illustration.
 - 6) Connect sensor wires according to color.
 - 7) Put front cover back on.
 - 8) Plug in the lead wires from the exterior box.
 - 9) Plug in power.
 - 10) Verify that the opposite light flashes when the sensor is activated.
 - 11) Customer Service = 877-728-3891

Forklift Collision Awareness Sensor Alert Warning Products

www.collisionawareness.com